

INSTALLATION GUIDE

REDUCE GLARE

PINHOLE

SNOOT

LINEAR

GOBO

TRACK

MAGNETIC TRACK

SURFACE

SINGLE POINT

WALL MOUNT

PENDANT

OUTDOOR

MINIATURE



	Module Model			Page
LED MODULE	Nest / Classic / Pro			8 - 10
	Fixture Model	Cut-out	Type	Page
	March 1			
REDUCE GLARE	Vasari			
	Vasari 3 Pro Round Tilt	Ø80mm		11
	Vasari 3 Round Fix / Tilt Trim	Ø90mm	A	13
	Vasari 3 Square Fix / Tilt Trim	90x90mm	Α _	
	Vasari 3 Round Fix / Tilt Trimless	Ø90mm	E _	23
	Vasari 3 Square Fix / Tilt Trimless	90x90mm	E	
	Vasari 4 Round Fix / Tilt Trim	Ø125mm	G	28
	Vasari 4 Square Fix / Tilt Trim	125x125mm	G	"
	Vasari 4 Round Fix / Tilt Trimless	Ø125mm	E	23
	Vasari 4 Square Fix / Tilt Trimless	125x125mm	Е	ш
	·			
	Vasari 6 Round Fix / Tilt Trim	Ø150mm	G2	29
	Vasari 6 Square Fix / Tilt Trim	150x150mm	G2	ec.
	Vasari 6 Round Fix / Tilt Trimless	Ø150mm	E2	24
	Vasari 6 Square Fix / Tilt Trimless	150x150mm	E2	u
	Vasari Wallwash			
	Vasari 3 Round Wallwash	Ø90mm	В	18
	Vasari 3 Square Wallwash	90x90mm	В	"
	Vasari 4 Round Wallwash	Ø125mm	В	и
	Vasari 4 Square Wallwash	125x125mm	В	ss.
	Vasari 6 Round Wallwash	Ø150mm	B2	19
	Vasari 6 Square Wallwash	150x150mm	B2	ű
	Vaca			
	Veco	Ø00 · · · ·	DC.	00
	Veco 3 Round Fix / Tilt Trim	Ø88mm	B3	20
	Veco 3 Round Fix / Tilt Trimless	Ø88mm	E	23
	Veco 4 Round Fix / Tilt Trim	Ø105mm	В3	20
	Veco 4 Round Fix / Tilt Trimless	Ø99mm	E	23
	Antares			
	Antares 3 Round Fix / Tilt	Ø83mm	В3	20

	Fixture Model	Cut-out	Type	Page
PINHOLE	Alti			
	Alti 3 Round Tilt	Ø83mm	Α	13
	Eclipse			
	Eclipse 2 Round Fix / Tilt Trim	Ø54mm	A2	14
	Eclipse 3 Mini Round Fix Trim Eclipse 3 Pro Round / Square Tilt Trim	Ø77mm Ø83mm	A2	"
	Eclipse 3 Round Tilt Trim	Ø83mm	Α	13
	Eclipse 3 Round Tilt Flush Mount	Ø83mm	E 5	27
	Eclipse 4 Mini Round Fix / Tilt Trim	Ø104mm	A2	14
	Eclipse 4 Round Tilt Trim	Ø125mm	Α	13
	Eclipse 4 Round Tilt Flush Mount	Ø142mm	E 5	27
	Castor			
	Castor 2 Round Fix / Tilt Trim	Ø54mm	A3	15
	Castor 2 Round Fix / Tilt Trimless	Ø54mm	E3	25
	Castor 3 Mini Round Fix / Tilt Trim	Ø77mm	А3	15
	Castor 3 Mini Round Fix / Tilt Trimless	Ø77mm	E3	25
	Castor 4 Mini Round Fix / Tilt Trim	Ø100mm	A3	15
	Castor 4 Mini Round Fix / Tilt Trimless	Ø100mm	E3	25
SNOOT	Artis Artis 3 Round Tilt Trim	Ø110mm	A4	16
	Artis 3 Round Tilt Trimless	Ø110mm	E4	26
	Artis 3 UNO Tilt Surface	-	D	22
	Artis 3 DUO Tilt Surface	-	D	"
	Artis 3 UNO Tilt Trim	105x105mm	С	21
	Artis 3 DUO Tilt Trim	105x204.5mm	С	u
	Artis 3 TRIO Tilt Trim	105x304.5mm	С	66
	Artis 4 Round Tilt Trim	Ø140mm	A4	16
	Artis 4 Round Tilt Trimless	Ø140mm	E4	26
	Artis 4 UNO Tilt Surface Artis 4 DUO Tilt Surface	-	D D	22
	Artis 4 DOO Tilt Trim	- 150x150mm	С	21
	Artis 4 DUO Tilt Trim	150x275mm	C	"
	Artis 4 TRIO Tilt Trim	150x408mm	С	66
	Piazzo			
	Piazzo 3 Round Tilt Trim	Ø85mm	A 4	16
	Piazzo 3 UNO Tilt Trim	88x88mm	С	21
	Piazzo 3 DUO Tilt Trim	170x88mm	С	"
	Piazzo 3 TRIO Tilt Trim	255x88mm	С	66
	Piazzo 4 Round Tilt Trim	Ø110mm	A 4	16
	Piazzo 4 UNO Tilt Trim	125x125mm	С	21
	Piazzo 4 DUO Tilt Trim	250x125mm	С	и
	Piazzo 4 TRIO Tilt Trim	375x125mm	С	u
	Piazzo 6 Round Tilt Trim	Ø140mm	A 5	17

	Fixture Model	Cut-out	Туре	Page
LINEAR	Lynx			
LINLAN	Lynx 2 Fix Trim	57x36mm		30
	Lynx 4 Fix Trim	105x36mm		"
	Lynx 4 Tilt Trim	113x50mm		66
	Lynx 4 Fix Trimless	105x38mm		31
	Lynx 8 Fix Trim	203x36mm		30
	Lynx 8 Tilt Trim	208x50mm		"
	Lynx 8 Fix Trimless	203x38mm		31
	Lynx 12 Fix Trim	298x36mm		30
	Lynx 12 Tilt Trim	298x50mm		"
		298x36mm		31
	Lynx 12 Fix Trimless			
	Lynx 12 Fix IP66	295x35mm		30
	Lynx			
	Block Recessed	41x93mm		30
GOBO	Modi			
4020	Modi Pro Track			35
MAGNETIC	Space ²			
TRACK	Space ² Opal Light			32-34
110.010	Space ² Dot Light			"
	Space ² Wallwash			66
	Space ² Pendant			66
	Space ² Spotlight			66
TRACK	Snoop			
THAOR	Snoop 3 Track			35
	Snoop 4 Track			"
	Scope			
	Scope 3 Track			35
	Cube			
	Cube Track			35
	Tube			
	Tube Track			35
	Vega			
	Vega Track			36
	Vega Zoom Track			ss.
	Quad			

	Fixture Model	Cut-out	Type	Page
SURFACE	Snoop			
OOTITAGE	Snoop 2 Surface			37
	Snoop 3 Surface			66
	Snoop 4 Surface			и
	Cube			
	Cube Surface			37
	Block			
	Block Surface			37
	Vega			
	Vega Surface			38
	Vega Zoom Surface			и
SINGLE POINT	Snoop			
	Snoop 2 Single Point Surface	-		39
	Snoop 2 Single Point Recessed	Ø43mm		40
	Snoop 3 Single Point Surface	-		39
	Snoop 3 Single Point Recessed	Ø80mm		40
	Snoop 4 Single Point Surface	-		39
	Snoop 4 Single Point Recessed	Ø100mm		40
	Scope			
	Scope 3 Single Point Surface	-		39
	Cube			
	Cube Single Point Recessed	Ø50mm		40
	Tube			
	Tube Single Point Recessed	12W - Ø64mm 18W - Ø76mm		40
	Invinci Tube			
	Invinci Tube Single Point Recessed	9W - Ø78mm		41
		18W - Ø98mm		

	Fixture Model	Cut-out	Туре	Page
WALL MOUNT	Snoop			
	Snoop 2 Wall Mount Down			42
	Snoop 2 Wall Mount Up Down			ee.
	Grioop 2 Waii Mount op Bown			
	Snoop 3 Wall Mount Down			39
	Snoop 3 Wall Mount Up Down			
	Cube			
	Cube Wall Mount			42
	Block			
	Block Wall Mount			42
	Vega			
	Vega Wall Mount			43
	Vega Zoom Wall Mount			ss.
PENDANT	Snoop			
	Snoop 3 Pendant	Ø60mm		44
	Snoop 4 Pendant	Ø90mm		55
	Vega			
	Vega Pendant	12W - Ø80mm		45
		17/26W - Ø84mm		"
	Vega Zoom Pendant	12W - Ø80mm		44
		17/26W - Ø84mm		66
OUTDOOR	Snoop Canopy			
	Snoop 3 Canopy			47
	Snoop 4 Canopy			и
	Snoop 4 Canopy Short			u
	Snoop Wall Mount			
	Snoop 3 Wall Mount Down			42
	Snoop 3 Wall Mount Up Down			ee
	Snoop Tree Spike			
	Snoop 3 Tree Spike			46
	Snoop 4 Tree Spike			"


	Fixture Model	Cut-out	Туре	Page
MINIATURE	Coin			
	Coin Recessed	Ø53mm		48
	Coin Surface	-		
	Button			
	Button Micro Fix	Ø33mm		49
	Button Mini Fix	Ø61mm		ш
	Button Zoom	Ø56mm		66
	Button Tilt	Ø35mm		"
	Beem Rail			
	Beem Rail Linear	72 / 172 / 272 / 372 (L) x W15mm		50
	Beem Rail Flat	Ø33mm		51
	Beem Rail Micro	Ø18mm		52
	Beem Rail Mini	Ø27mm		"
	Echo			
	Echo Tophat	Ø32mm		53
	Echo Dot	Ø32mm		"
	Echo Eclipse	Ø32mm		"
	Echo Round	Ø32mm		66
	Starlite			
	Starlite Micro	Ø22mm		54
	Starlite Mini	Ø30mm		"




NEST LED MODULE

DALI : DA+ DA-, NO POLARITY


0-10V : RED FOR "+", BROWN FOR "-"

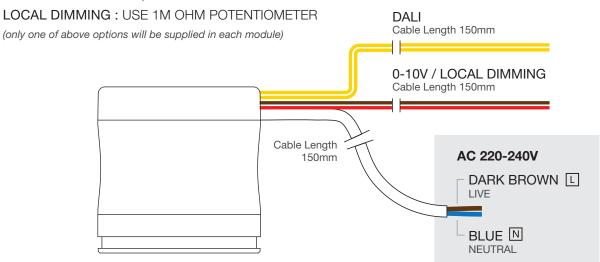


Mounting Options for ELR Nest LED Module Series

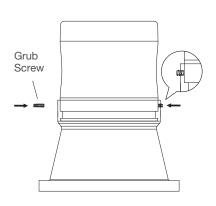

Method 1 Grub screw to tighten between module & fixture.

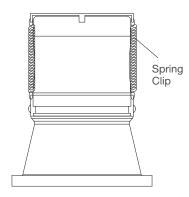


Method 2 Attach module & fixture with spring clip.

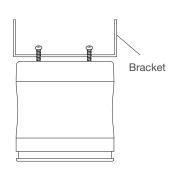

Method 3 Screw on bracket to module.

LED Module Installation Conditions

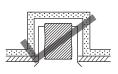


Insulation Material




Narrow Space



Enclosed Space

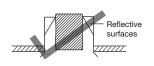

Reflection Material

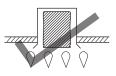


Wet Area






CLASSIC / PRO LED MODULE

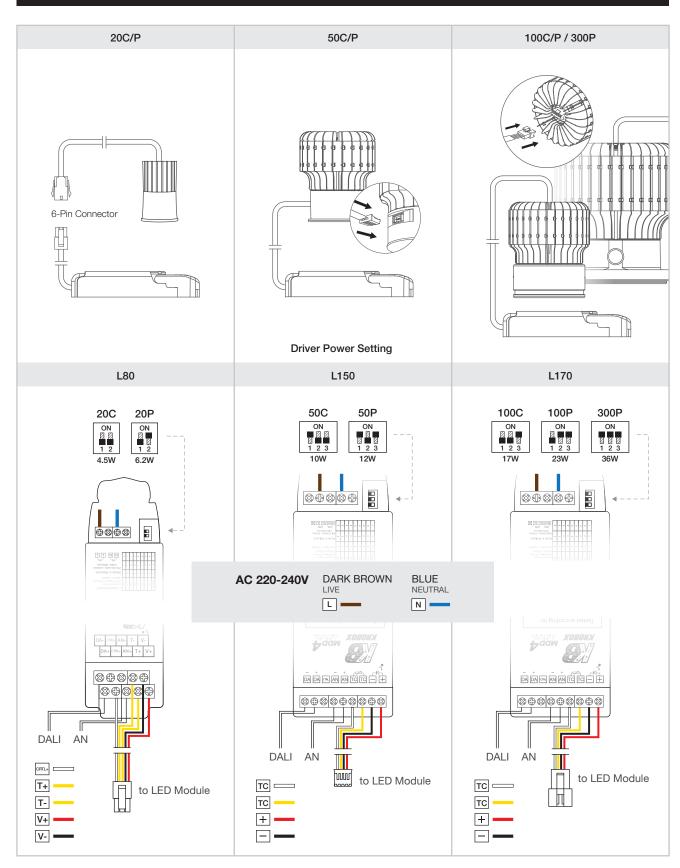



CLASSIC / PRO LED MODULE

- Suitable for indoor installation only.
- Disconnect mains before proceeding.
- Locate fitting in accordance with local standards. Refer to image below for clearances.

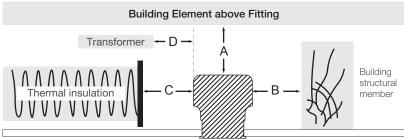

Barrier required for loose fill insulation or loose combustible materials

Recessed luminaire

I	Dimension	LED Lamp
	A - Clearance above luminaire	25mm
	B - Side clearance to structural member	50mm
	C - Clearance to thermal insulation	50mm
	D - Clearance to supply transformer	25mm

WARNING! Use of ELR's light engine under the stated environments below will NOT be covered in our warranty.








Narrow Space



Enclosed Space

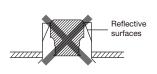



Reflection Material



Outdoor

Mounting Options for ELR Classic / Pro LED Module Series

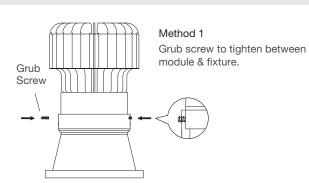

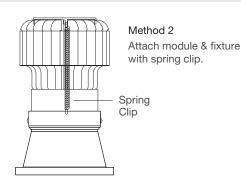

LED Module Important Notes

Environment (in maximum value)

Storage Temperature

-20°C...85°C

Ambience

50°C

Working Humidity

85% RH

SAFETY WARNING

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our the supplied constant current LED driver. It is not compatible with any other type of driver, Fallier to adhere to this may damage fitting and will void warranty.
- DO NOT COVER LED lamp or driver under any circumstances
- Ensure main supply is not energised and/or disconnected prior to installation and during connection/disconnection of LED lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No This product does not contain user serviceable parts. Do not attempt to disassemble or repair LED lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any ways.
- Allow suitable sufficient air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used household, compatible to standard phase dimmer for to achieve best lighting effects achievement and provide additional added values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advice is to use dimmers models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.


If you have any dimmers model that is are not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmers to get tested. We will response to you within the shortest possible time time possible and will advise you about of the compatibility to our Luminaires.






PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

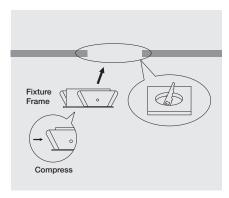


1. Cutout and compress spring plates to insert fixture frame to ceiling.

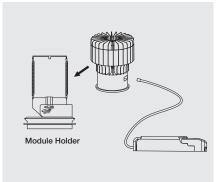


2. Attach module to module holder 3. Gently insert module holder & with spring clip and connect module to driver.

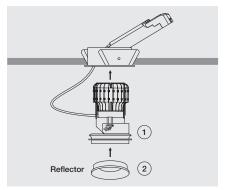

reflector from the bottom of the fixture frame.

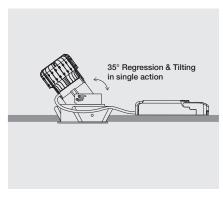

4. Adjust the angle required. Assembly complete.

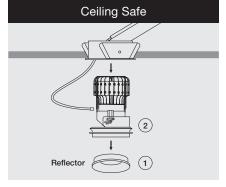

Reverse the installation step 3 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.


If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

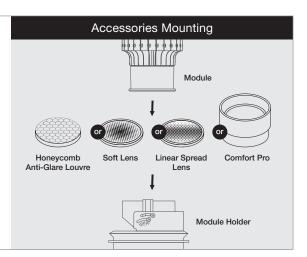




PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

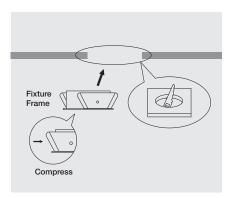


1. Cutout and compress spring plates to insert fixture frame to ceiling.

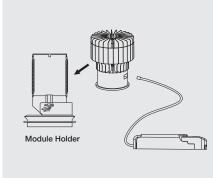


2. Attach module to module holder 3. Gently insert module holder & with spring clip and connect module to driver.

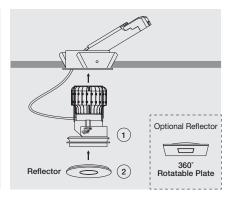

reflector from the bottom of the fixture frame.

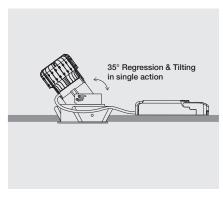

4. Adjust the angle required. Assembly complete.

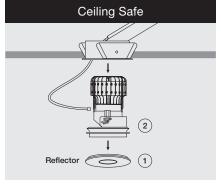

Reverse the installation step 3 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

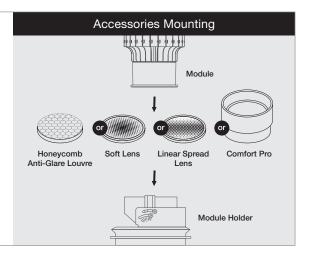











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

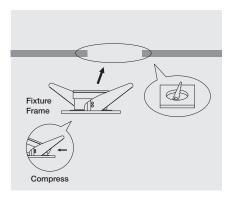


1. Cutout and compress spring plates to insert fixture frame to ceiling.

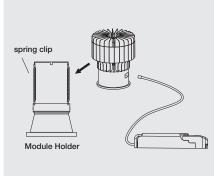


2. Attach module to module holder 3. Gently insert module holder with spring clip and connect module to driver.

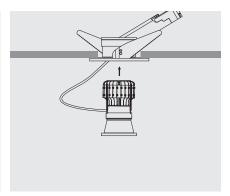

from the bottom of the fixture frame.

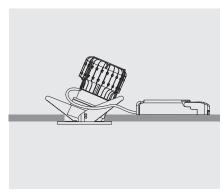

4. Adjust the angle required. Assembly complete.

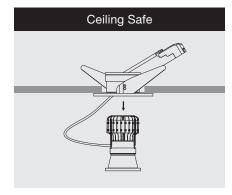

Reverse the installation step 3 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

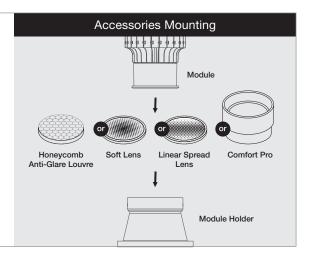











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

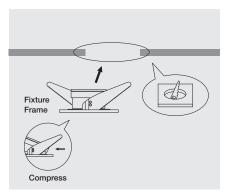


1. Cutout and compress spring plates to insert fixture frame to ceiling.

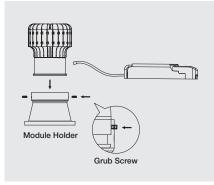


2. Grub screw to tighten between module & module holder and connect module to driver.

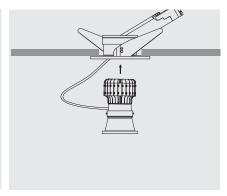

3. Gently insert module holder from the bottom of the fixture frame.

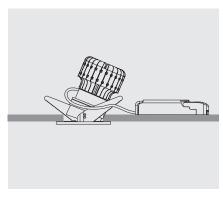

4. Adjust the angle required. Assembly complete.

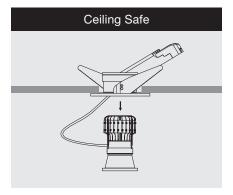

Reverse the installation step 3 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

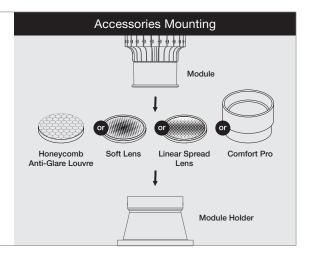









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

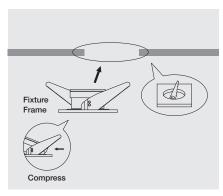


1. Cutout and compress spring plates to insert fixture frame to ceiling.

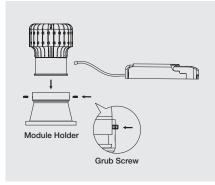


2. Grub screw to tighten between module & module holder and connect module to driver.

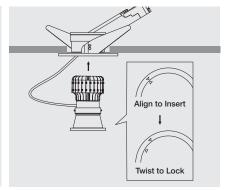

3. Gently insert module holder from the bottom of the fixture frame.

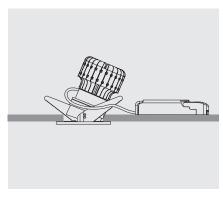

4. Adjust the angle required. Assembly complete.

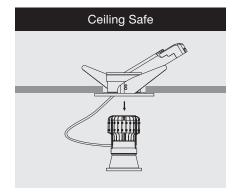

Reverse the installation step 3 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

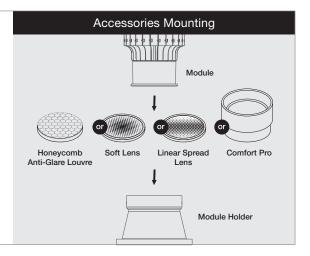











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

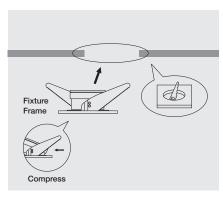


1. Cutout and compress spring plates to insert fixture frame to ceiling.

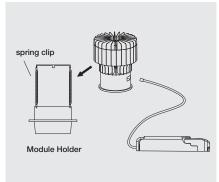


2. Attach module to module holder 3. Gently insert module holder with spring clip and connect module to driver.

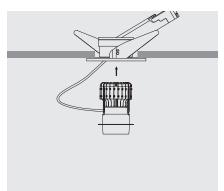

from the bottom of the fixture frame.

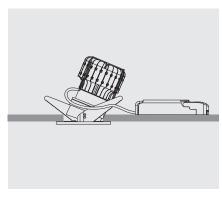

4. Adjust the angle required. Assembly complete.

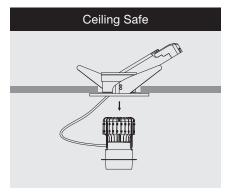

Reverse the installation step 3 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

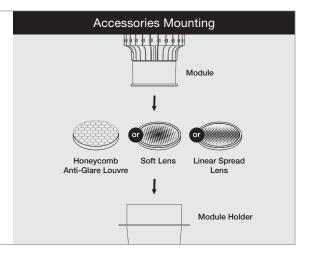











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

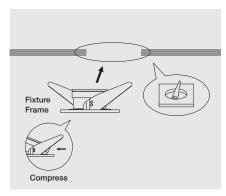


1. Cutout and compress spring plates to insert fixture frame to ceiling.

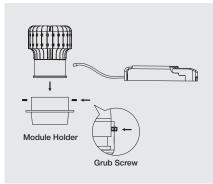


2. Grub screw to tighten between module & module holder and connect module to driver.

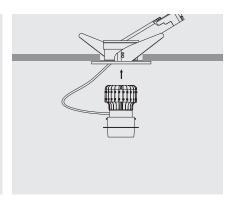

3. Gently insert module holder from the bottom of the fixture frame.

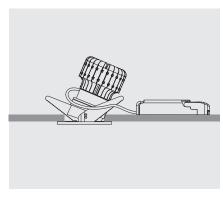

4. Adjust the angle required. Assembly complete.

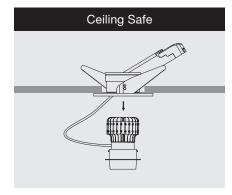

Reverse the installation step 3 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

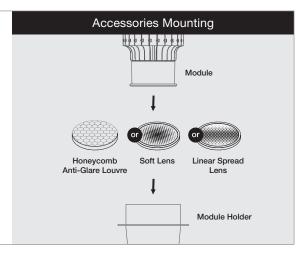







PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

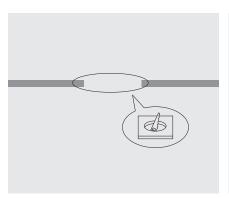




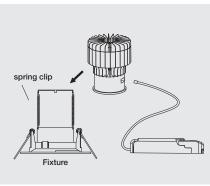


2. Attach module to fixture with spring clip and connect module to driver.

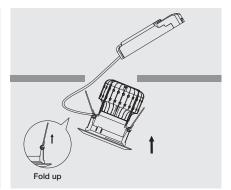

3. Fold up the spring clips and gently insert one side of the fixture into the cut out hole.

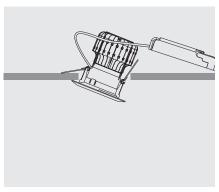

4. Secure the fixture by pushing in the other side.

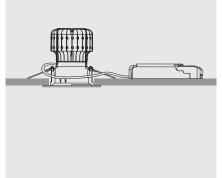

5. Assembly complete.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- . No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

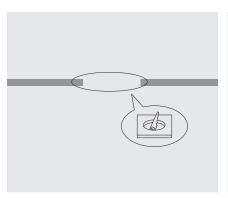




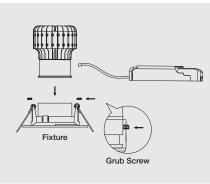


2. Grub screw to tighten between module & fixture and connect module to driver.

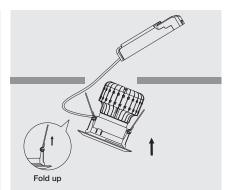

3. Fold up the spring clips and gently insert one side of the fixture into the cut out hole.

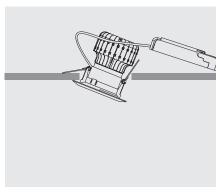

4. Secure the fixture by pushing in the other side.

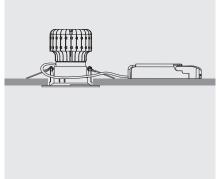

5. Assembly complete.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- . No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

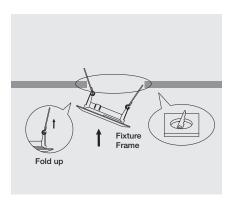


1. Cutout and fold up the spring clips and gently insert one side of the fixture into the cut out hole.

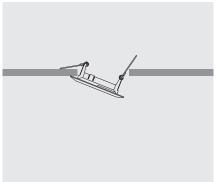


2. Secure the fixture by pushing in the other side.

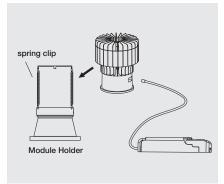


3. Attach module to module holder with spring clip and connect module to driver.

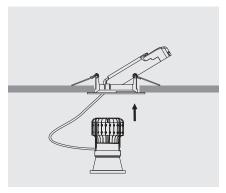

4. Gently insert module holder from the bottom of the fixture frame.

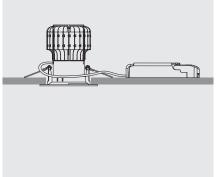

5. Adjust the angle required. Assembly complete.

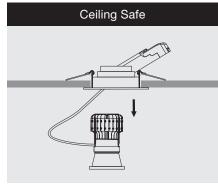

Reverse the installation step 4 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

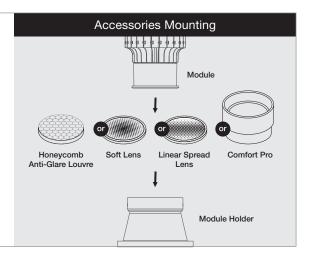











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

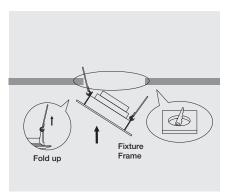


1. Cutout and fold up the spring clips and gently insert one side of the fixture frame into the cut out hole.

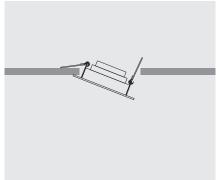


2. Secure the fixture frame by pushing in the other side.

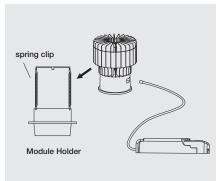


3. Attach module to module holder with spring clip and connect module to driver.

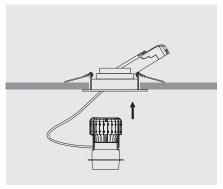

4. Gently insert module holder from the bottom of the fixture frame.

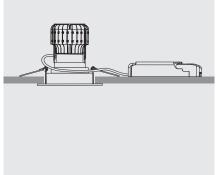

5. Adjust the angle required. Assembly complete.

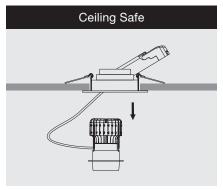

Reverse the installation step 4 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

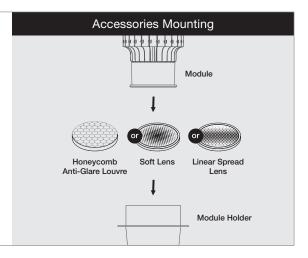







PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

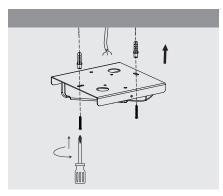


1. Install bracket to the ceiling.

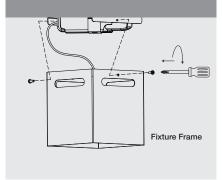


2. Secure driver and fixture frame to bracket.

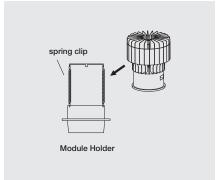


3. Attach module to module holder with spring clip.

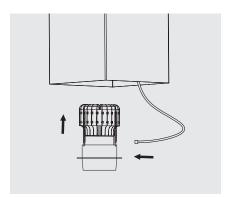

4. Connect module to driver. Gently insert module holder from the bottom of the fixture frame.

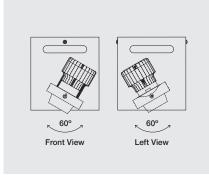

5. Adjust the angle required. Assembly complete.

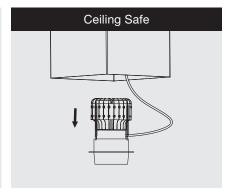

Reverse the installation step 4 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

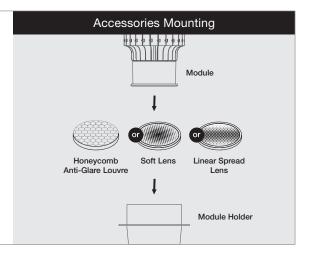











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

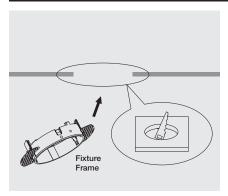


1. Cutout and fit fixture frame to ceiling.

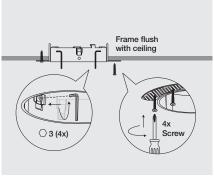


2. Secure the side brackets. Adjust the fixture frame to sit flush with ceiling before tightening with the side brackets using hex wrench.

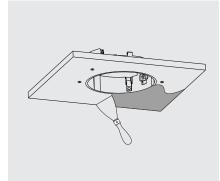


3. Plaster up the ceiling to hide brackets and screws.

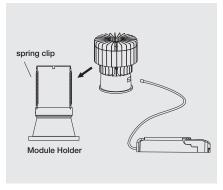

4. Attach module to module holder 5. Gently insert module holder with spring clip and connect module to driver.

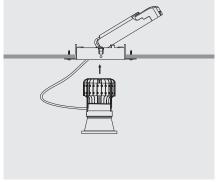

from the bottom of the fixture frame.

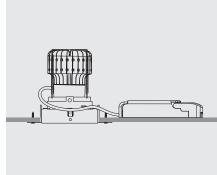

6. Assembly complete.

CEILING SAFE

Reverse the installation step 5 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

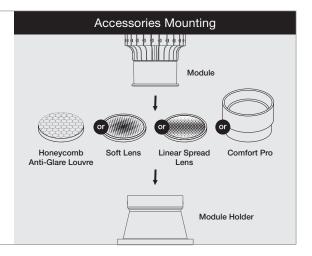









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

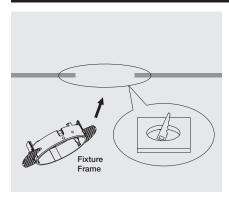


1. Cutout and fit fixture frame to ceiling.

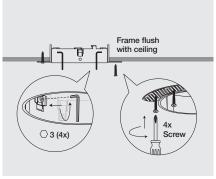


2. Secure the side brackets. Adjust the fixture frame to sit flush with ceiling before tightening with the side brackets using hex wrench.

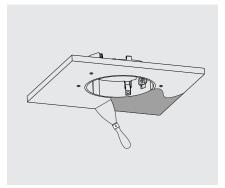


3. Plaster up the ceiling to hide brackets and screws.

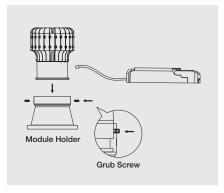

4. Grub screw to tighten between module & module holder and connect module to driver.

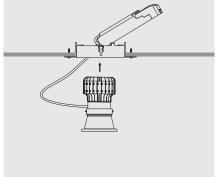

5. Gently insert module holder from the bottom of the fixture frame.

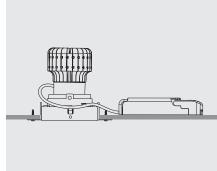

6. Assembly complete.

CEILING SAFE

Reverse the installation step 5 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

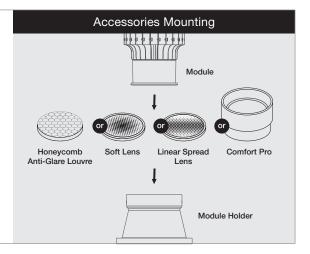











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

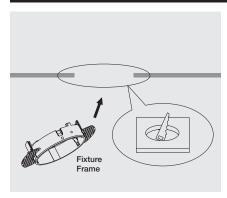


1. Cutout and fit fixture frame to ceiling.

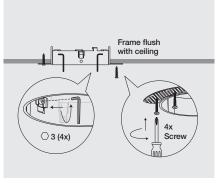


2. Secure the side brackets. Adjust the fixture frame to sit flush with ceiling before tightening with the side brackets using hex wrench.

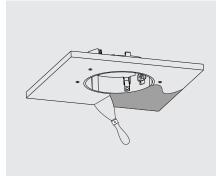


3. Plaster up the ceiling to hide brackets and screws.

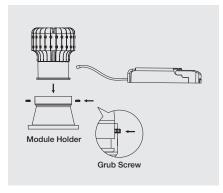

4. Grub screw to tighten between module & module holder and connect module to driver.

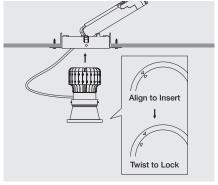

5. Gently insert module holder from the bottom of the fixture frame.

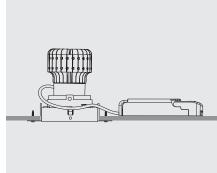

6. Assembly complete.

CEILING SAFE

Reverse the installation step 5 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

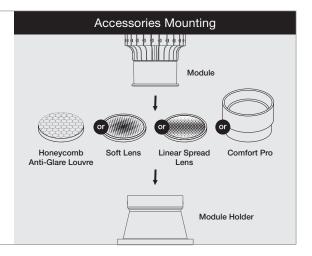









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

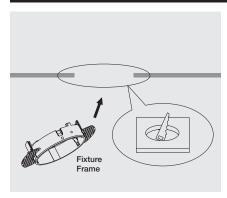


1. Cutout and fit fixture frame to ceiling.

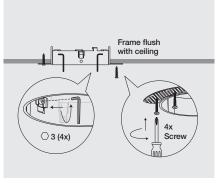


2. Secure the side brackets. Adjust the fixture frame to sit flush with ceiling before tightening with the side brackets using hex wrench.

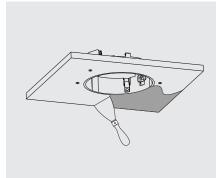


3. Plaster up the ceiling to hide brackets and screws.

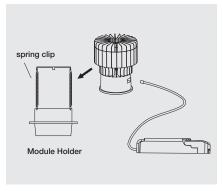

4. Attach module to module holder 5. Gently insert module holder with spring clip and connect module to driver.

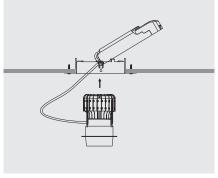

from the bottom of the fixture frame.

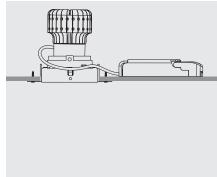

6. Assembly complete.

CEILING SAFE

Reverse the installation step 5 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

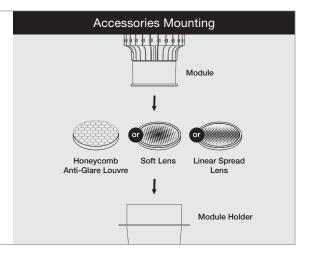









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

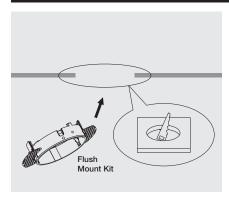


1. Cutout and fit flush mount kit to ceiling.

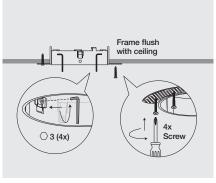


2. Secure the side brackets. Adjust the fixture frame to sit flush with ceiling before tightening with the side brackets using hex wrench.

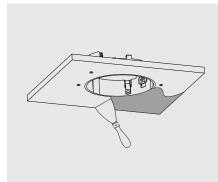


3. Plaster up the ceiling to hide brackets and screws.

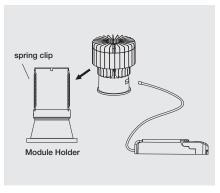

4. Attach module to module holder 5. Gently insert fixture frame & with spring clip and connect module to driver.

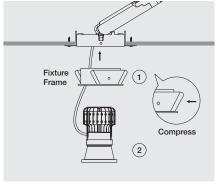

module holder from the bottom of the flush mount kit.

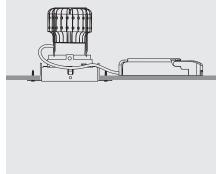

6. Assembly complete.

CEILING SAFE

Reverse the installation step 5 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

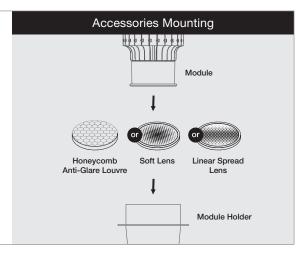











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

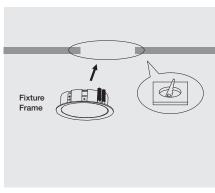


1. Cutout and insert fixture frame to ceiling.

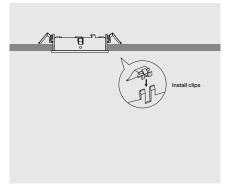


2. Install clips.

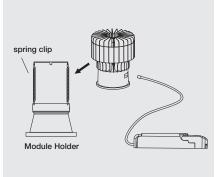


3. Attach module to module holder with spring clip and connect module to driver.

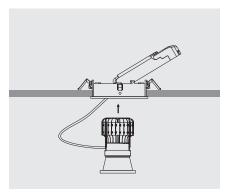

4. Gently insert module holder from the bottom of the fixture frame.

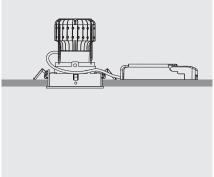

5. Adjust the angle required. Assembly complete.

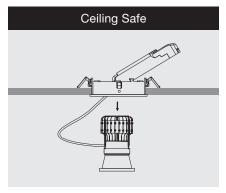

Reverse the installation step 4 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

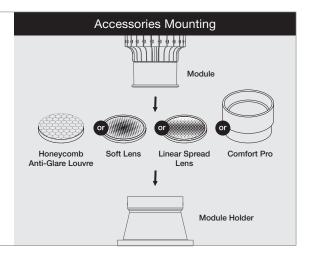









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

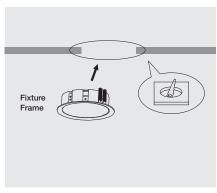




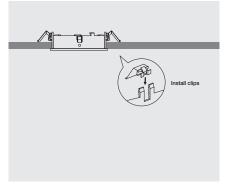


2. Install clips.

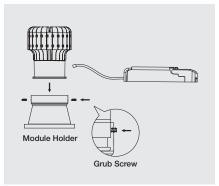


3. Grub screw to tighten between module & module holder and connect module to driver.

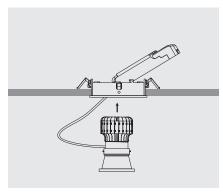

4. Gently insert module holder from the bottom of the fixture frame.

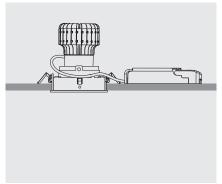

5. Adjust the angle required. Assembly complete.

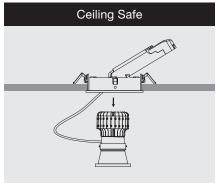

Reverse the installation step 4 for LED module replacement / maintenance.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

SAFETY WARNING


- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.

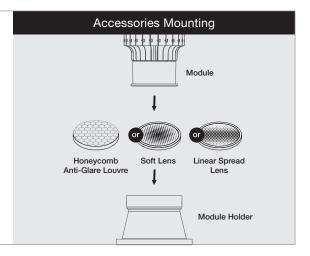











PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

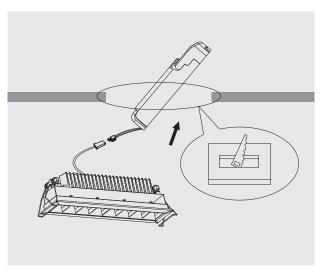

1. Cutout

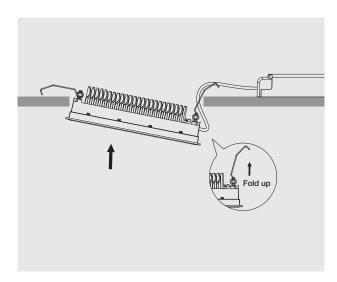

2. Fold up the spring clips and gently insert one side of the fixture into the cut out hole.

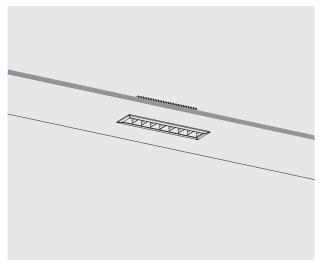

3. Secure the fixture by pushing in the other side. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




LYNX TRIMLESS INSTALLATION GUIDE




▲ CEILING THICKNESS 1MM ~ 20MM

PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

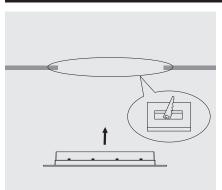


1. Cutout and fit mounting kit into ceiling hole.

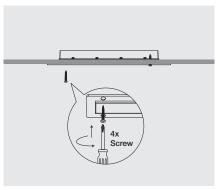


2. Secure the side brackets with 4 screws.

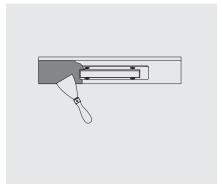


3. Plaster up the ceiling to hide brackets and screws.

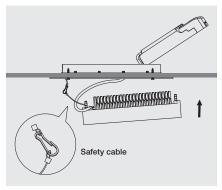

4. Gently insert the reflector from the bottom of the frame.

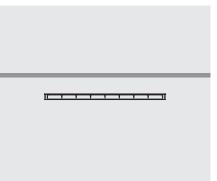

5. Assembly complete.

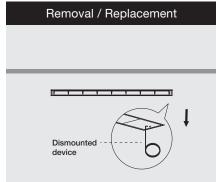

Use the dismounted device to insert the mini hole on the side, and then pull down carefully.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- . No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.


If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.





MAGNETIC TRACK SURFACE INSTALLATION GUIDE

PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!

Follow the steps as illustrated below

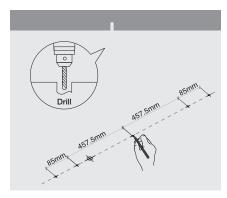


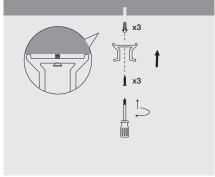


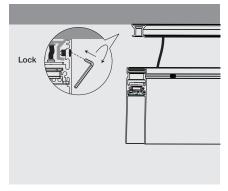


1. Drill holes.

- 2. Install the bracket to the ceiling.
- 3. Turn the hex wrench clockwise to lock the bracket.

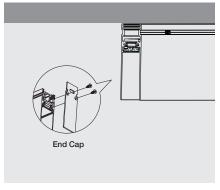

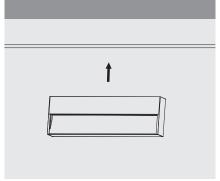


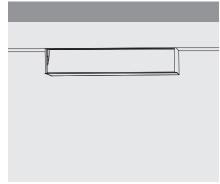

- 4. Cover with end cap.
- 5. Place fixture to track.
- 6. Assembly complete.

Follow the stiching method as illustrated below



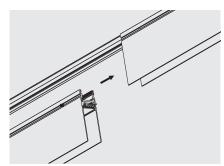

- 1. Install profile power connector.
- 2. Connect profiles.

SAFETY WARNING

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.

 Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing. No user serviceable parts. Do not attempt to disassemble or repair lamp or driver

- Do not use in flammable or explosive environments.

 Do not attempt to modify fitting or supplied wiring in any way.

 Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.


best up in a ginary enter. An envertient in an photive advancinal values to Our dissolvent in the However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors. If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




MAGNETIC TRACK RECESSED INSTALLATION GUIDE

PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

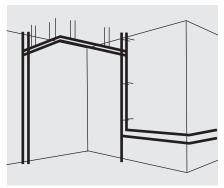


1. Preinstallation section on wall and ceiling.

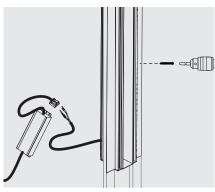


2. Connect wire and secure profile with screw.

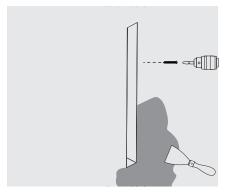


3. Plaster ceiling to hide screws and mounting kit.

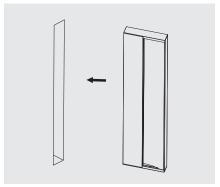

4. Place fixture to track.

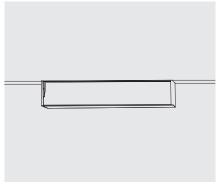


5. Assembly complete.

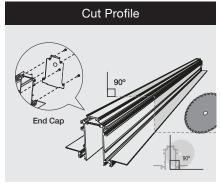


Profile cut in 90° and screw end cap.


Follow the stiching method as illustrated below

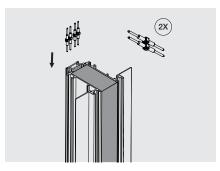

1. Install profile power connector.

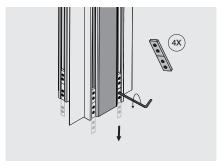

2. Anti-clockwise to unlock the connector.

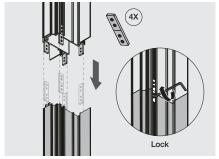

3. Connect profiles and lock.

SAFETY WARNING

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.

 Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing. No user serviceable parts. Do not attempt to disassemble or repair lamp or driver

- Do not use in flammable or explosive environments.

 Do not attempt to modify fitting or supplied wiring in any way.

 Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.


best up in a ginary enter. An envertient in an photive advancinal values to Our dissolvent in the However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors. If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.





MAGNETIC TRACK PENDANT INSTALLATION GUIDE

PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

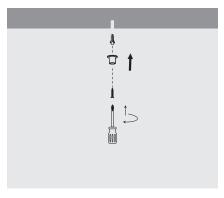


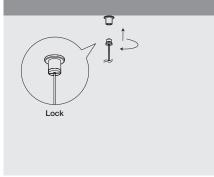


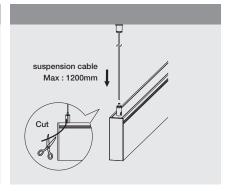

- 1. Install the bracket to the ceiling. 2. Install bracket cover.
- 3. Attach suspension cable to pendant track.

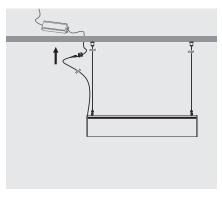


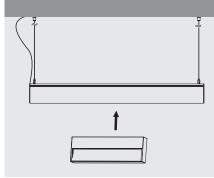


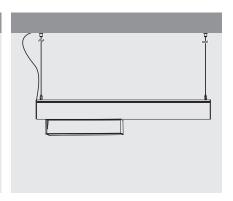


- 4. Balance the pendant and connect wire.
- 5. Place fixture to track.
- 6. Assembly complete.

Follow the stiching method as illustrated below

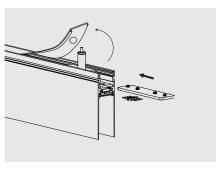

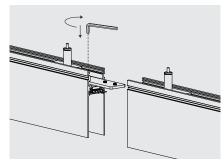

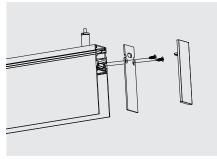

- 1. Install profile power connector.
- 2. Connect profiles.
- 3. Cover with end cap.

SAFETY WARNING

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.

 Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing. No user serviceable parts. Do not attempt to disassemble or repair lamp or driver
- Do not use in flammable or explosive environments.

 Do not attempt to modify fitting or supplied wiring in any way.

 Allow suitable air flow and ventilation around the fitting.


DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

best up in a ginary enter. An envertient in an photive advancinal values to Our dissolvent in the However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors. If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.






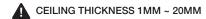


PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

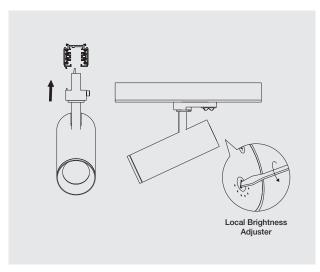


1. Adjust local brightness & attach fixture to track adapter.

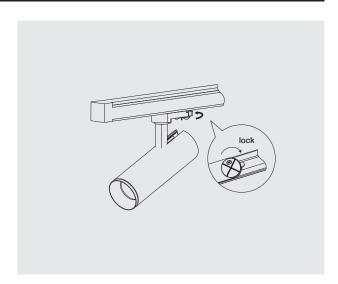

2. Secure the fixture by locking.

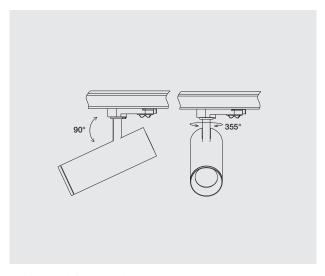

3. Assembly complete.

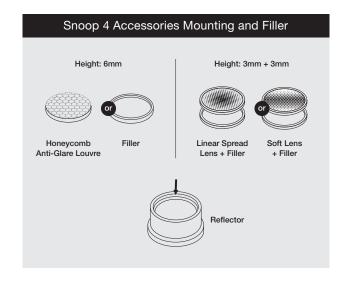

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION


Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.






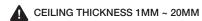


PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

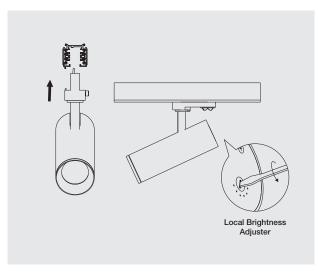

1. Adjust local brightness & attach fixture to track adapter.

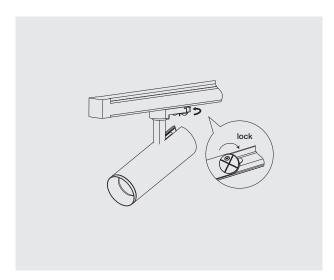

2. Secure the fixture by locking.

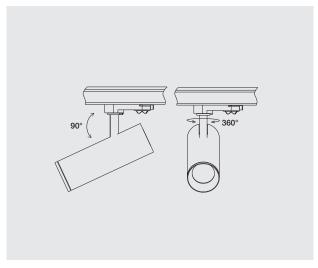

3. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

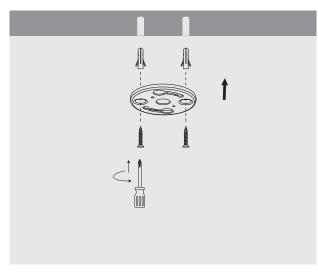


1. Install bracket to the ceiling.

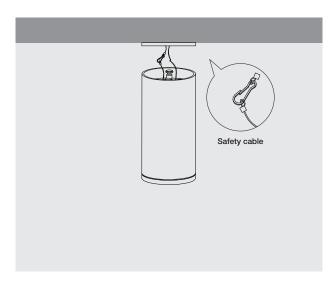

2. Connect the wire & snap in the safety cable.

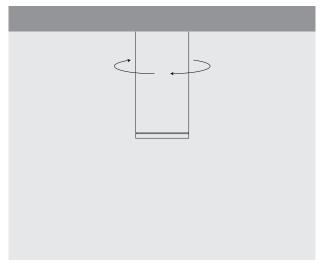

3. Have fixture in-line & turn clockwise to lock. Assembly complete.

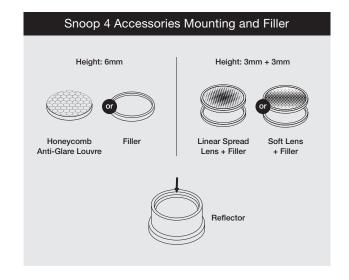

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION


Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




VEGA SURFACE INSTALLATION GUIDE

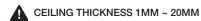


PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

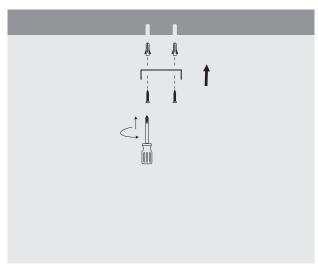

1. Install the bracket to the ceiling.

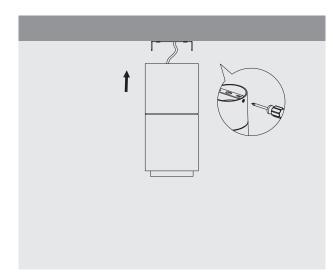

2. Connect wire & install the fixture to the ceiling.

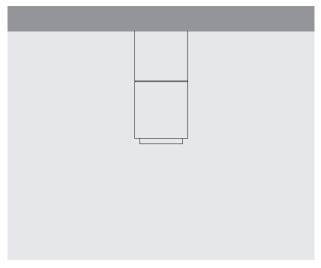

3. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




SINGLE POINT SURFACE INSTALLATION GUIDE


▲ CEILING THICKNESS 1MM ~ 20MM

PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

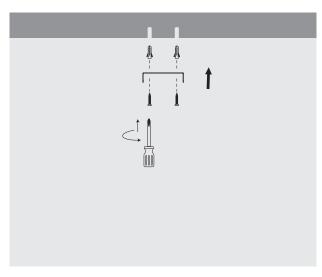


1. Install the bracket to the ceiling.

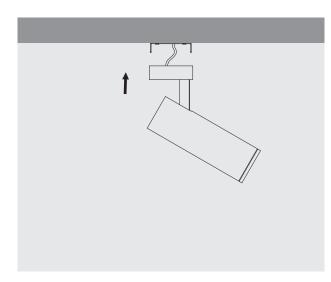

2. Connect wire & install the fixture to the ceiling.

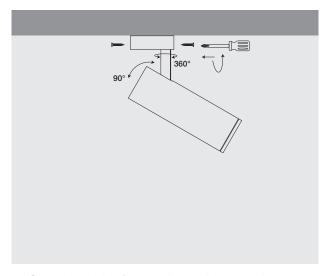

3. Screw lock the fixture. Assembly complete.

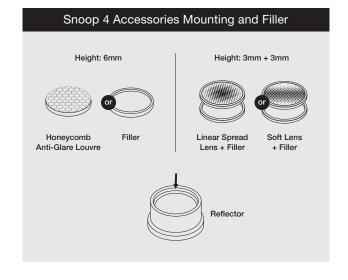

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION


Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




SINGLE POINT RECESSED INSTALLATION GUIDE

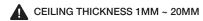


PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

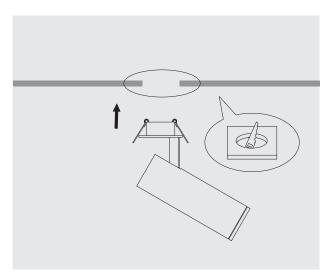


1. Cutout

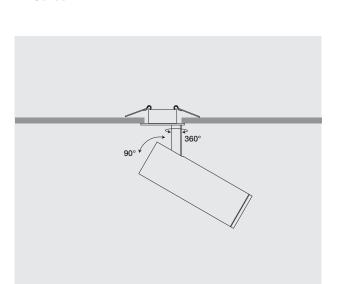

3. Assembly complete.

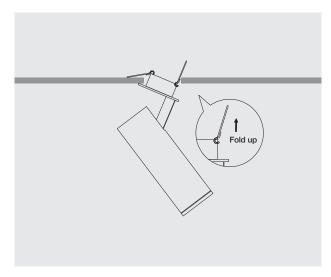

2. Fold up the spring clips and gently insert one side of the fixture into the cut out hole.

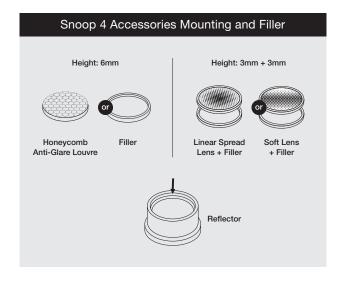

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- . No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.


If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




INVINCI TUBE SINGLE POINT INSTALLATION GUIDE

PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

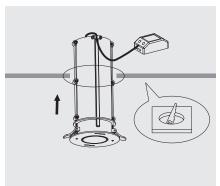




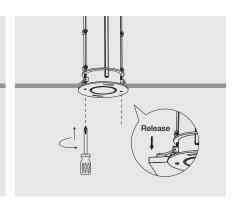

- 1. Cutout and connect wire.
- 2. Turn the screw driver clockwise to fold up the clip.
- 3. Turn the screw driver anti-clockwise to release the clip and secure the fixture.

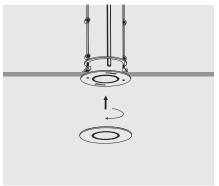



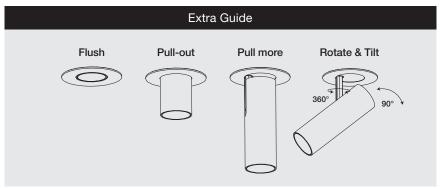

Pull down the tube as preferred.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.


However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

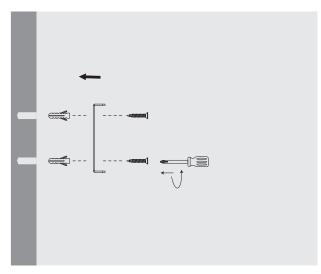

1. Install the bracket to the wall.

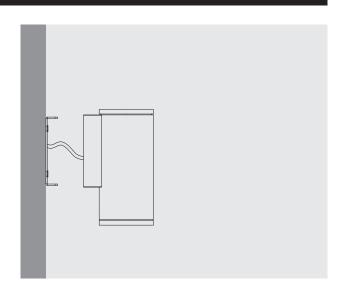

2. Connect wire & install the fixture to the wall.

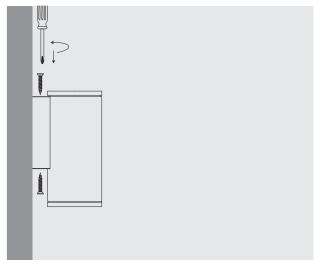

3. Screw lock the fixture. Assembly complete.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to achere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




VEGA WALL MOUNT INSTALLATION GUIDE


▲ CEILING THICKNESS 1MM ~ 20MM

PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

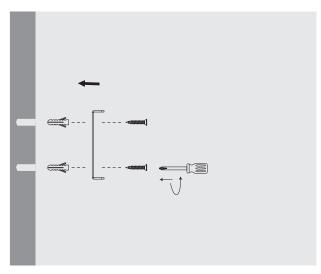

1. Install the bracket to the wall.

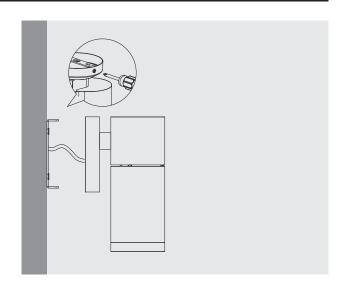

2. Connect wire & install the fixture to the wall.

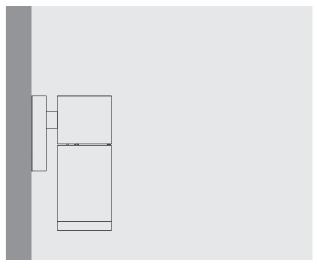

3. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.


However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

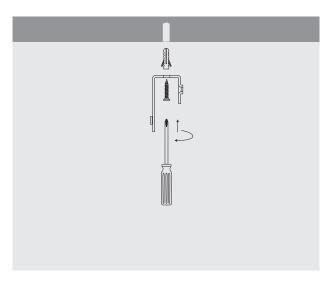


1. Install the bracket to the ceiling.

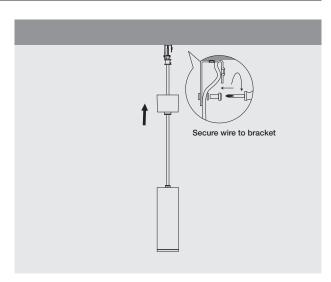

2. Connect wire & install the fixture to the ceiling.

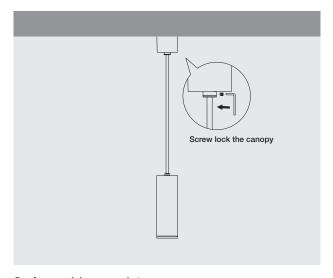

3. Assembly complete.

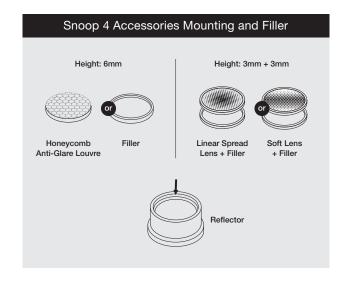

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




VEGA PENDANT INSTALLATION GUIDE


▲ CEILING THICKNESS 1MM ~ 20MM

PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

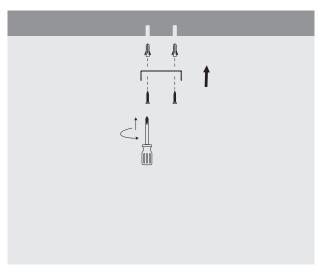

1. Install the bracket to the ceiling.

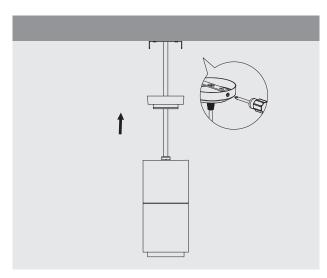

2. Connect wire & install the fixture to the ceiling.

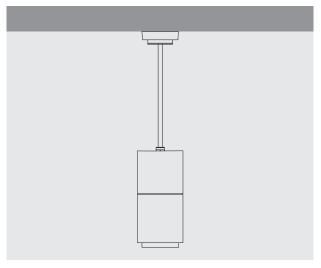

3. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

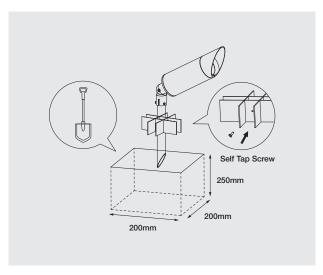

1. Dig out the footing area.

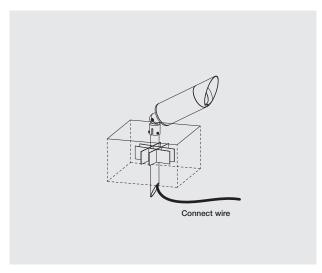

2. Connect wire and place in Tree Spike.

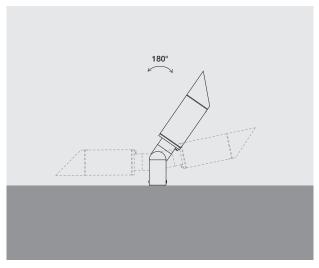

3. Assembly complete.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.









PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

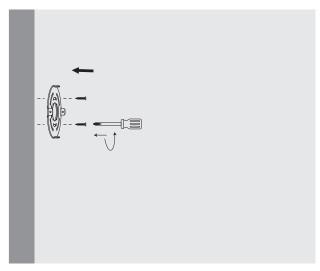

1. Install the bracket to the ceiling.

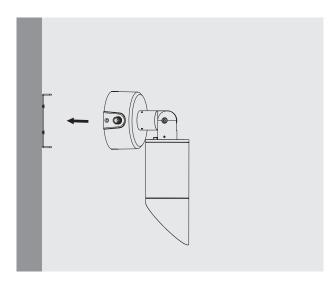

2. Install the canopy to the ceiling.

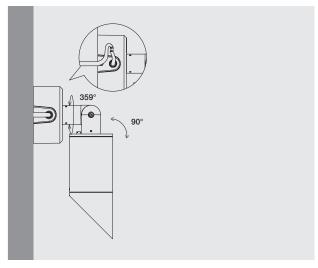

3. Connect wire. Assembly complete.

For connection between ELR LED modules and drivers, please refer to LED Module Installation Guide.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to achere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.



COIN HYBRID INSTALLATION GUIDE





Coin Recessed


▲ CEILING THICKNESS 1MM ~ 20MM


PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

- 1. Ø53mm cutout
- 2. Compress spring clips and insert into cutout hole.
- 3. Assembly complete.

L80 Driver Wiring Installation

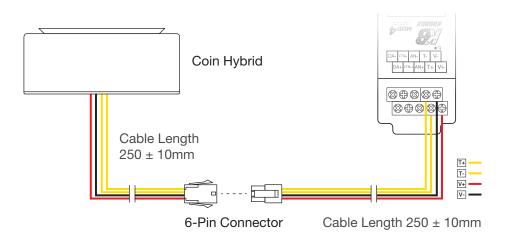

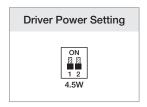

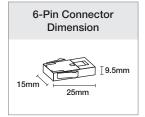

- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.


However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.









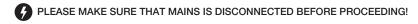


Follow the steps as illustrated below

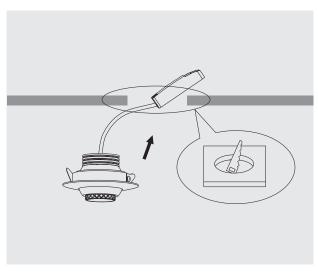

1. Cutout

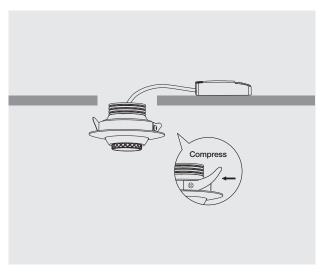

2. Compress spring plates and insert into cutout hole.

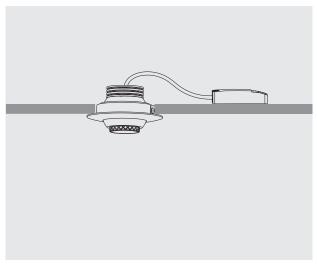

3. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION


Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.




BEEM RAIL LINEAR INSTALLATION GUIDE

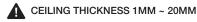


PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

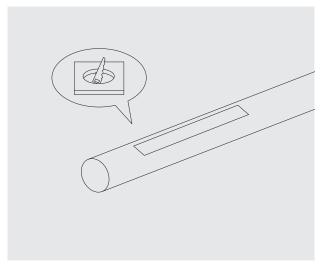

1. Drill hole.

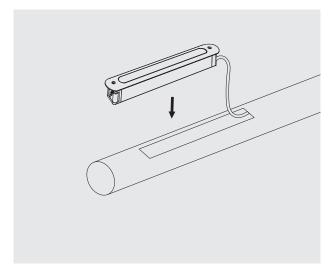

2. Connect wire. Insert into the hole.

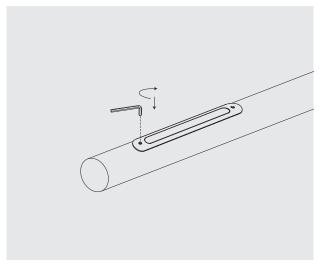

3. Use hex wrench to tighten. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.



BEEM RAIL FLAT INSTALLATION GUIDE




▲ CEILING THICKNESS 1MM ~ 20MM




PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

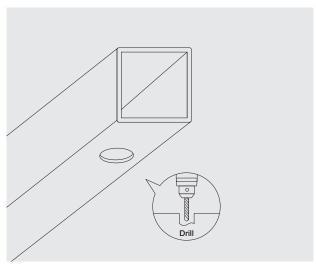

1. Drill hole.

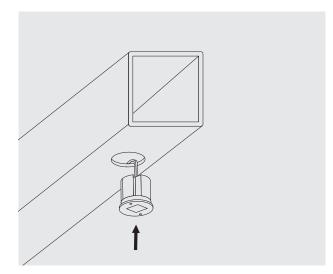

2. Connect wire and insert into the hole.

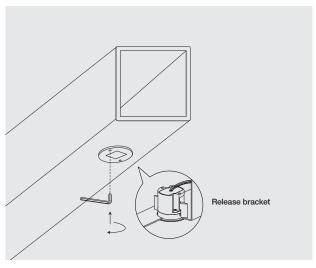

3. Turn the hex wrench clockwise to release the bracket. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.


If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.






PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

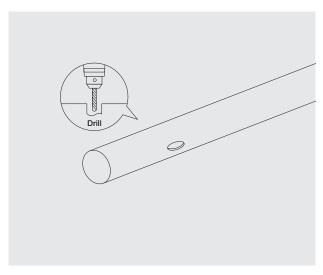

1. Drill hole.

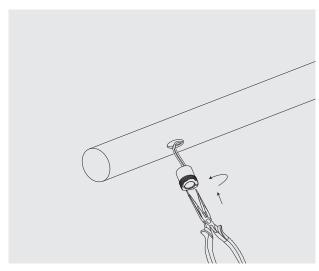

2. Connect wire and insert into cutout hole.

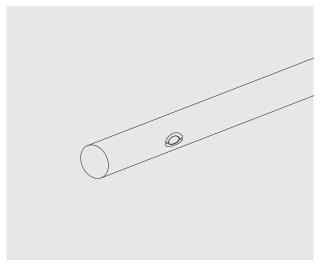

3. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION


Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.






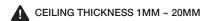





Follow the steps as illustrated below

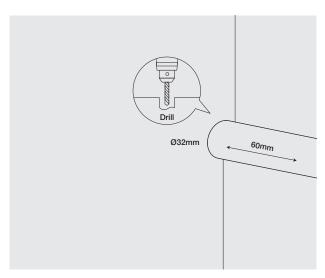

1. Drill hole.

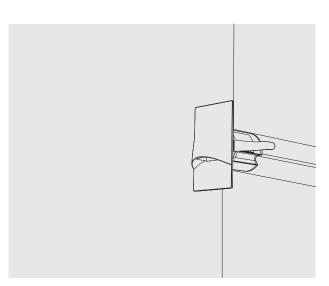

3. Assembly complete.

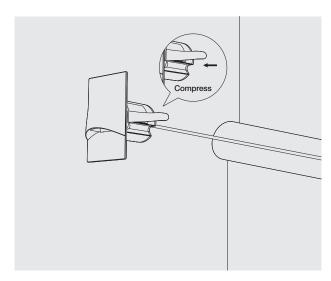

2. Connect wire. Compress spring plates and insert into the hole.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.


If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.






PLEASE MAKE SURE THAT MAINS IS DISCONNECTED BEFORE PROCEEDING!


Follow the steps as illustrated below

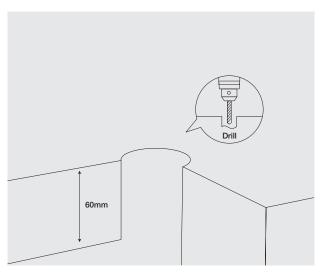

1. Drill hole.

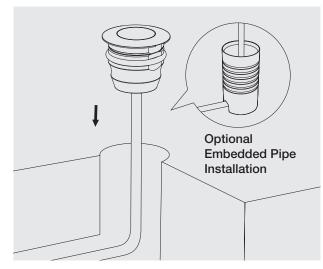

2. Connect wire and insert floor light to the hole.

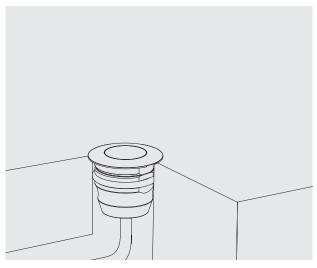

3. Assembly complete.

- Product MUST be installed by a licensed electrician in accordance with local standards.
- LED lamp MUST ONLY be connected to supplied our constant current LED driver. It is not compatible
 with any other type of driver. Failure to adhere to this may damage fitting and will void warranty.
- DO NOT COVER lamp or driver under any circumstances.
- Ensure main supply is not energised and/or disconnected prior to installation and connected/disconnection of lamp from driver.
- This fitting must not be Megger tested or connected during any in-circuit testing.
- No user serviceable parts. Do not attempt to disassemble or repair lamp or driver.
- Do not use in flammable or explosive environments.
- Do not attempt to modify fitting or supplied wiring in any way.
- Allow suitable air flow and ventilation around the fitting.

DIMMER COMPATIBILITY DECLARATION

Our Luminaires are designed for industry and home commonly used standard phase dimmer for best lighting effect achievement and provide additional values to our customer.

However, with thousands of dimmer models available in the market today, we cannot guarantee 100% compatibility. In order to avoid disappointment, our best advise is to use dimmer models that have been tested by us. The latest information of dimming compatibility will be available within our Dimmer Compatibility Card and can be obtained through our website and your local distributors.

If you have any dimmer model that is not within our Dimmer Compatibility Card, please kindly contact us and send in your dimmer to get tested. We will response to you within the shortest possible time and advise you about the compatibility to our Luminaires.